


### 1 Parts Identification

MRGW 34-48

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

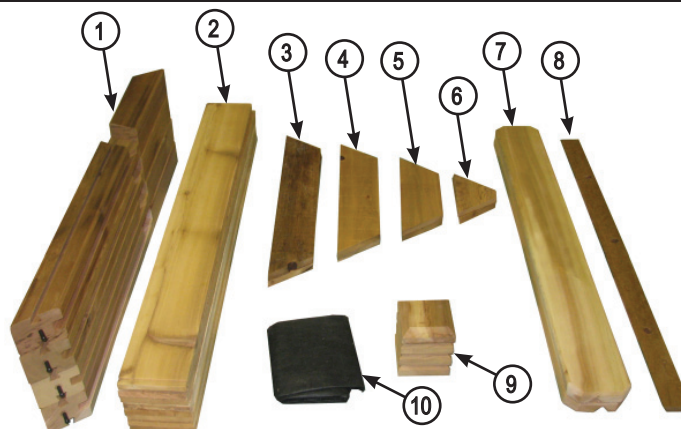


### Parts List

ITEM	QTY.	PART #	DESCRIPTION
1	4	CP41	Corner Post, 3-1/4" x 3-1/4" x 41-1/4"
2	8	R4501	Front & Back Side Rails, 45" x 5-5/8" x 13/16"
3	2	ES2613L	End Side Rails, 26-3/8" x 5-1/2" x 13/16"
4	2	ES2013	End Side Rails, 20-1/4" x 5-1/2" x 13/16"
5	2	ES1313	End Side Rails, 13.7/8" x 4-3/8" x 13/16"
6	2	ES0713	End Side Rails, 7-3/4" x 5-1/2" x 13/16"
7	2	SH43	Shelves, 43-3/4" x 5-1/2" x 1-3/8"
8	1	BCR43	Bottom Center Rail, 43-3/8" x 2-1/2" x 13/16"
9	4	R3100	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
10	1	FL3652	Fabric Liner, 36" x 52"

### 2 Post Assembly

Place two 3-1/4" x 3-1/4" x 41-1/4" corner posts (Item 1) together as shown.

Repeat procedure for the two remaining corner posts.

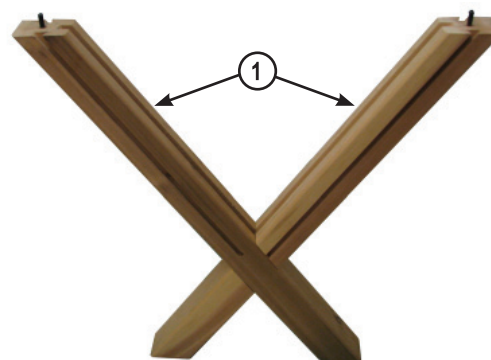


Packaged & Inspected by:

Date:

Continued

### 3 Side Rail Assembly


Install the eight 45" x 5-5/8" side rails (Item 2) into the upper part of the slots between the corner posts and slide down.

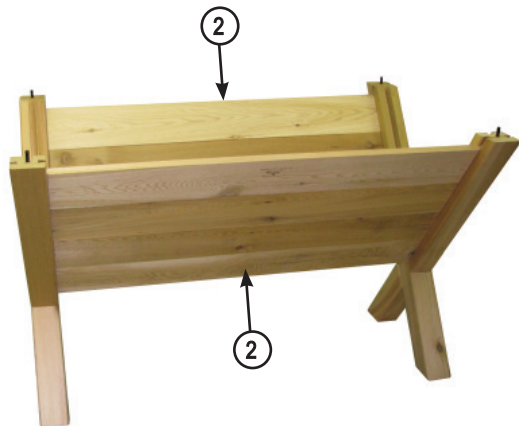

### 4 End Side Rail Assembly Continued

Install the four end side rails (Item 6, 5, 4 & 3) into the upper part of the slots between the two corner posts and slide down.

Repeat procedure on the opposite end with the four remaining end side rails.

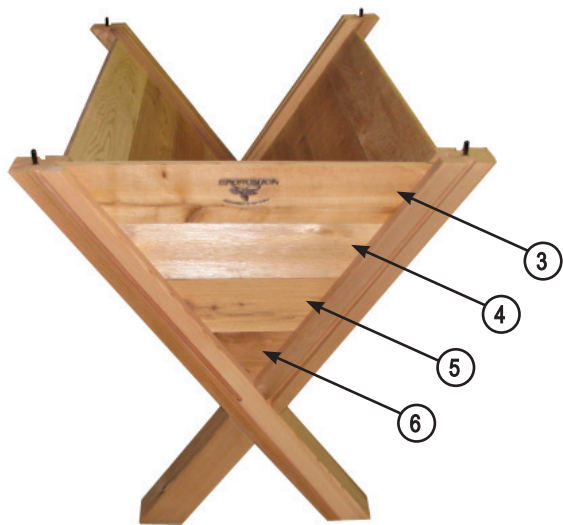


### 5 Bottom Center Rail Assembly

Install the 43-3/8" x 2-1/2" bottom center rail (Item 8) with the tapered edges of the rail facing down.

Install the fabric liner into the Garden Wedge.

Soil Capacity: 6.5 Cubic Feet

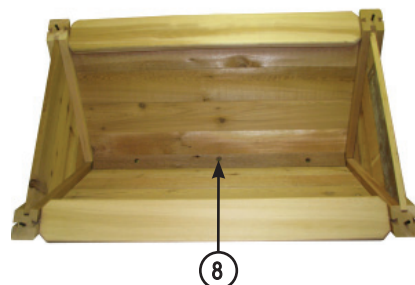

### 6 Shelf Assembly

Install the two 43-3/4" x 5-1/2" shelves (Item 7) onto the side rails on both sides of the Garden Wedge.



### 7 Post Cap Assembly

Remove the rubber cap from the post studs.

Align the hole of the 4" x 4" post cap (Item 9) with stud and tighten until the post cap makes contact with the post. Do not overtighten.

